


SCORPION // FITTING INSTRUCTIONS



Car	Volkswagen Golf GTI MK8	Part No.	SVWX064			
Year	2020-Current	Fit Kits	392FK			
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm			
Estimated Fitting Time: 6 Hours						

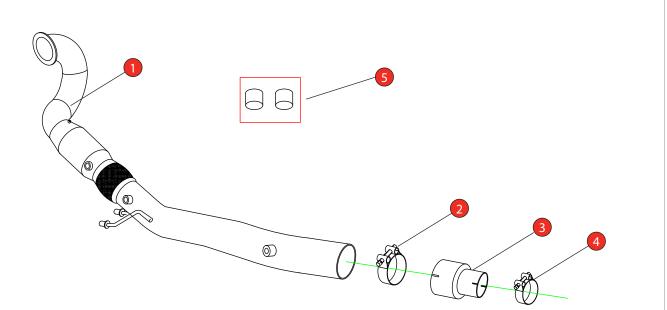

NO.	PART NO.	DESCRIPTION	QTY	CLASSIFICATION	Motorsport Use Only
1	811VW	Downpipe With A high Flow Sports Catalyst	1	HOMOLOGATED	No
Fit Kit					09/05/2022
2	Z016.10062	79mm H/D Clamp	1	ISSUE AUTHORISED	00
2			-		S Shipley
3	AD69	Adaptor (USE TO FIT TO O.E SYSTEM)	1		
4	Z016.10064	63-68mm Clamp (USE TO FIT TO O.E SYSTEM)	1		
5	Z038.10591	Vacuum Blanking Cap	2		

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.







SCORPION // FITTING INSTRUCTIONS

HAND BUILT

Car	Volkswagen Golf GTI MK8	Part No.	SVWX064	
Year	2020-Current	Fit Kits	392FK	
Notes	Where not supplied use original fittings	Features	Pipe Diameter:- 76mm	









A) Remove Lambda Probe from OE catalyst, then remove cable from clips indicated. (x4)

B) Feed Lambda cable down the right hand side (as you look at the engine). Ensure Lambda cable misses the gear cables, pass to the right hand side (as you look at engine). Take Lambda cable under the engine.Fit probe into Sensor boss on the cat section of the downpipe and tighten.

C/D/E) Locate the 2 GPF pressure sensor lines (Image C shows them with the downpipe removed for better view). Remove the clamps and pull the rubber hoses from the metal hard lines. Place the 2 vacuum blanking caps over the open ends of the hard lines to seal them.



